




JOAN 6 PRO

PoE Wall Mount

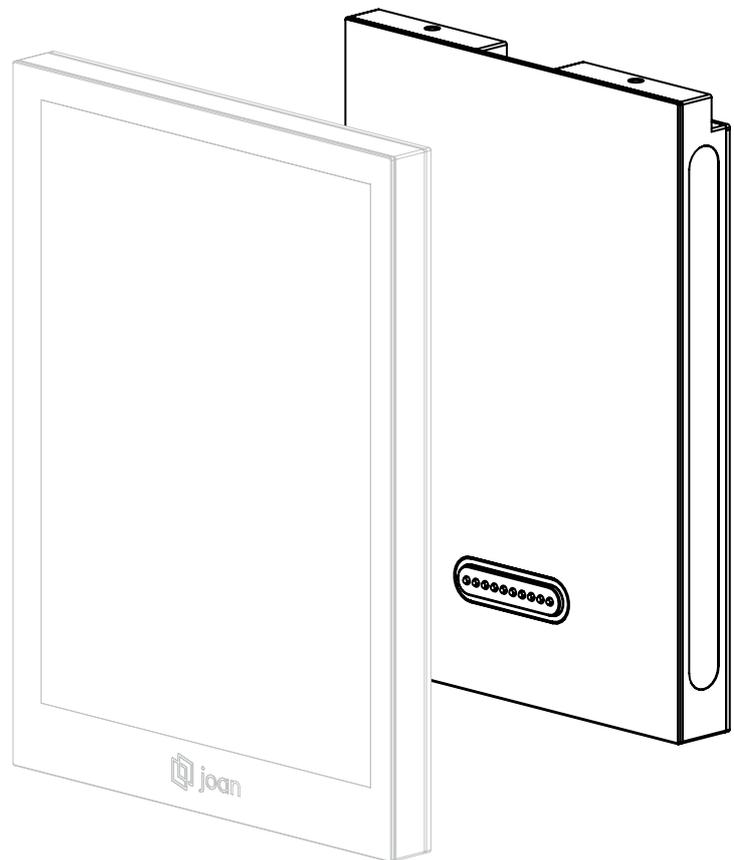


An absolute must for enterprises with extra stringent security protocols.

Wall mounting


1

Remove the front cover of the PoE Wall Mount.

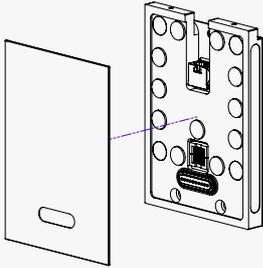


2

Drill holes into the wall and attach the PoE Wall Mount to the wall. The PoE Wall Mount can be mounted at a maximum height of 2 meters.

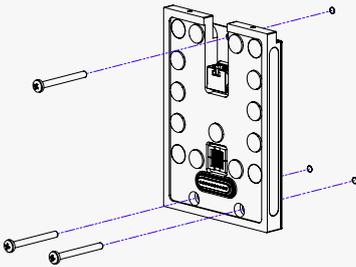


3

Plug the Ethernet cable into the PoE Wall Mount from the top. The cable can also slide in from the top right or left.

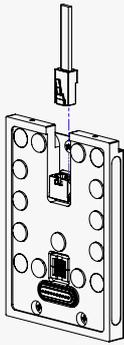


4

Put the front cover of the PoE Wall Mount back on.

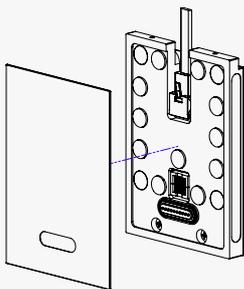


5

Attach your Joan 6 Pro to the PoE Wall Mount.

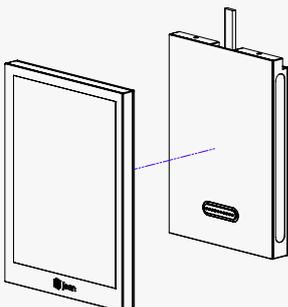

Glass mounting

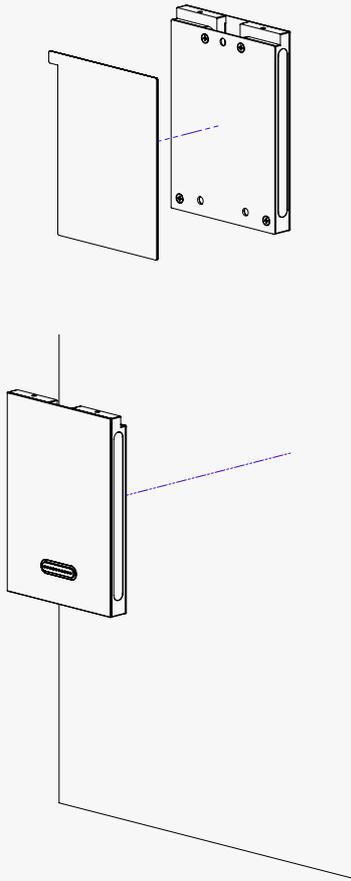

1

Clean the glass surface with rubbing alcohol or window cleaner to remove dust, debris, and oily residue, then wipe dry.

Remove one protective sheet from the double-sided adhesive tape, apply the tape to the back of the PoE Wall Mount, and press firmly across the entire surface.

2

Remove the remaining protective sheet and firmly apply the PoE Wall Mount to the glass surface.

Wait 30 minutes for the adhesive to set before attaching your Joan 6 Pro to the PoE Wall Mount.



WARNING

Adhesive tape is for glass mounting only. Using the adhesive tape on other surfaces may cause the device to fall, resulting in damage or injury.