


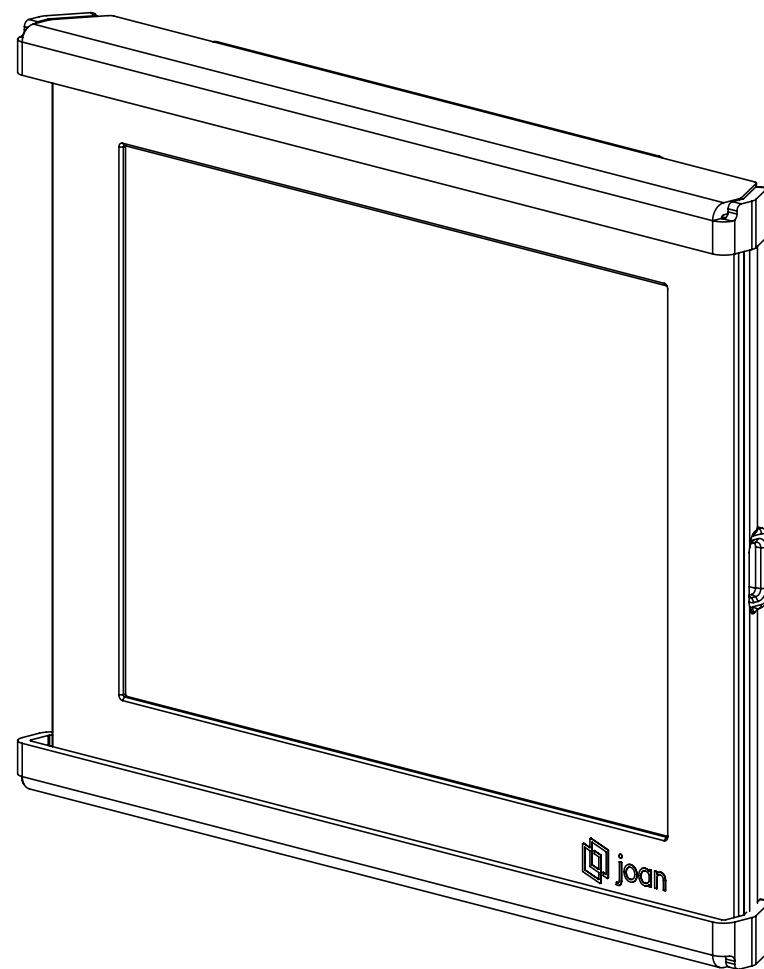

# Secure Mount

The safest option for Joan 6 RE devices.




2x



Drywall Anchor

2x




Drywall Anchor Screw

1x




Security Torx Key

2x




Alcohol Pad

1x

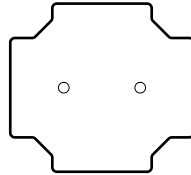

Double-Sided Adhesive Pad  
for Glass Mounting


1x

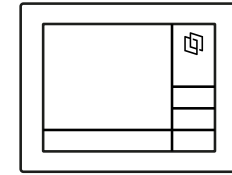

Joan 6 RE device

# Mounting to drywall

- 1 Install Drywall Anchors into the wall.
- 2 Fasten Secure Mount to the wall with the Drywall Anchor Screws.
- 3 Loosen Locking Bracket.
- 4 Insert Joan 6 RE topmost side first.
- 5 Tighten Locking Bracket.

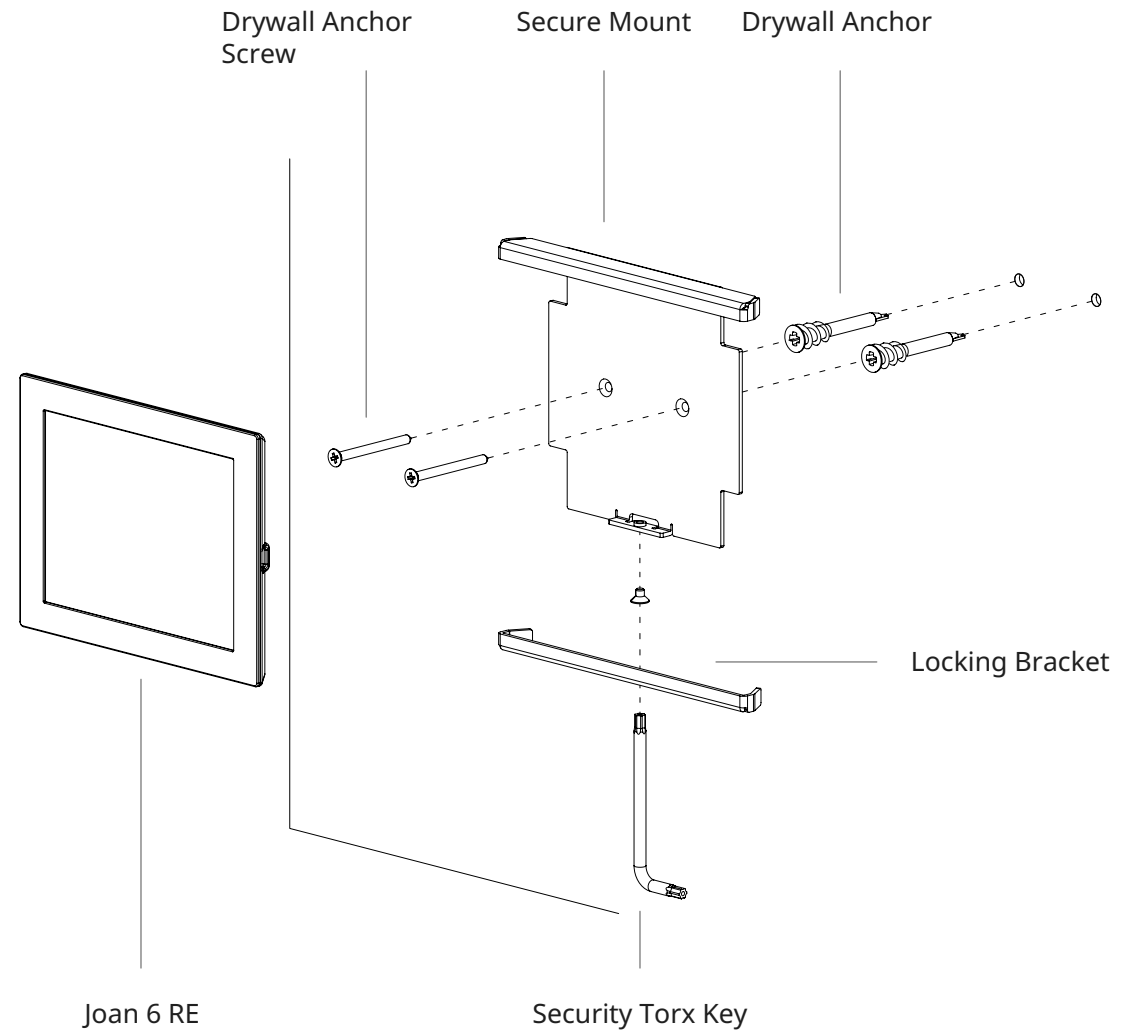

# Mounting to glass

- 1 Clean the glass surface and the rear of the Secure Mount with Alcohol Pads.
- 2 Adhere the Double-Sided Adhesive Pad onto the rear of the Secure Mount.
- 3 Adhere the Secure Mount to the glass panel.
- 4 Wait one hour for the adhesive to gain holding strength.
- 5 Loosen the Locking Bracket.
- 6 Insert Joan 6 RE topmost side first.
- 7 Tighten the Locking Bracket.

